


***FARAD* BARS**


BS 009 - 2

BMW 5 touring 2004-2010
BMW 5 berlina 2003-2010
TOYOTA COROLLA BERLINA 1997-2002
VW GOLF PLUS 2005>
SEAT ALHAMBRA 2011>
FORD EDGE 2016>




I	istruzioni di montaggio	F	Instructions de montage
PL	Instrukcja montażu	D	Einbauanleitung
GB	Fitting instructions	E	Instrucciones de montaje
NL	Inbouwhandleiding	SWE	Montageanvisnin

KIT BS

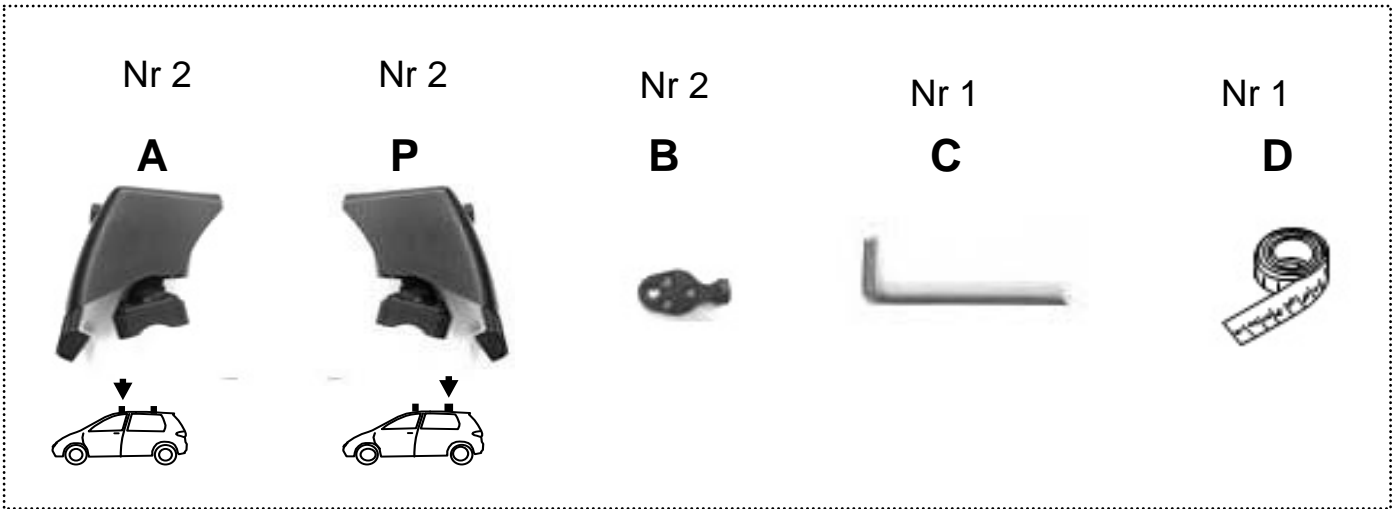












+


KIT ALU

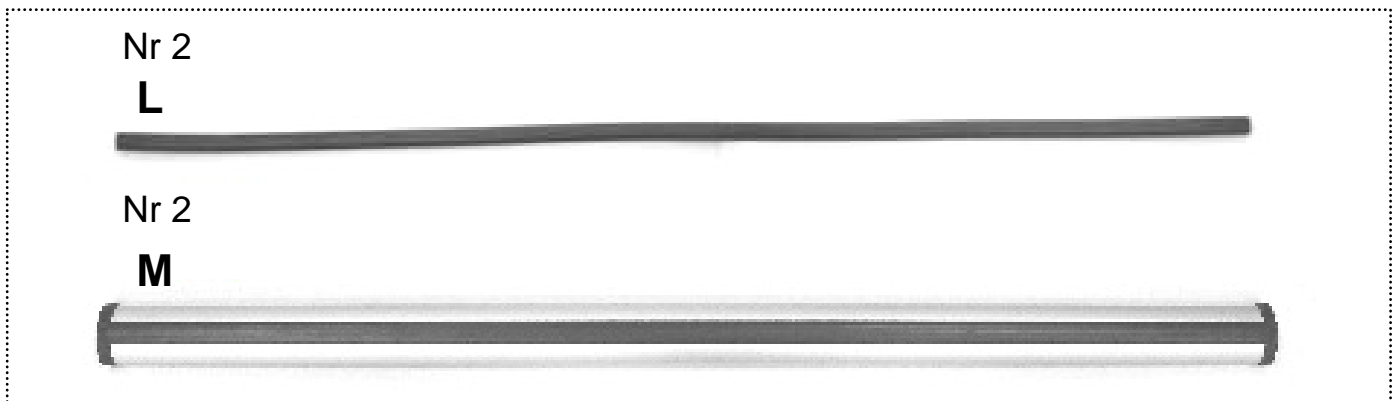




=


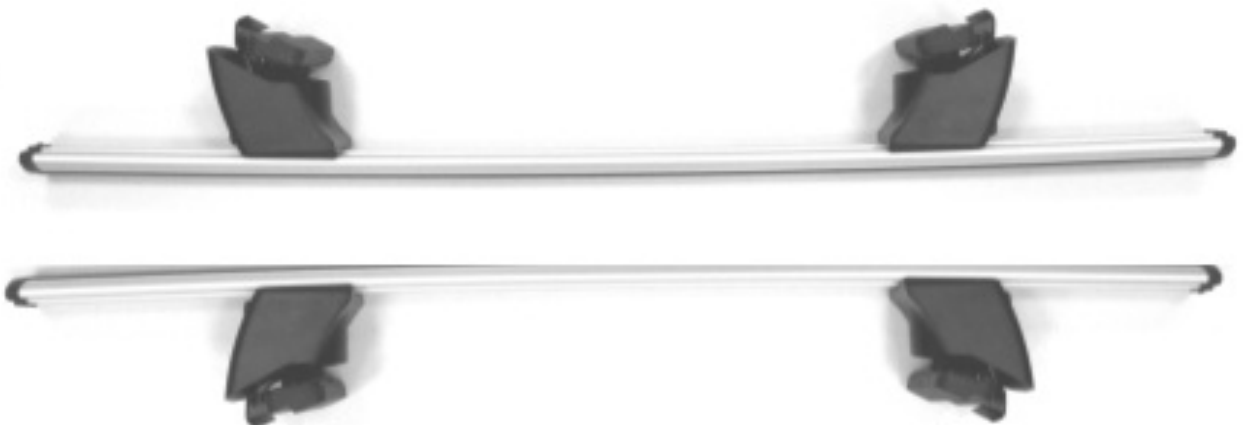


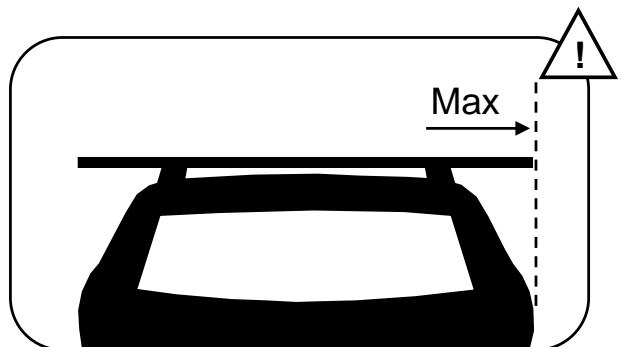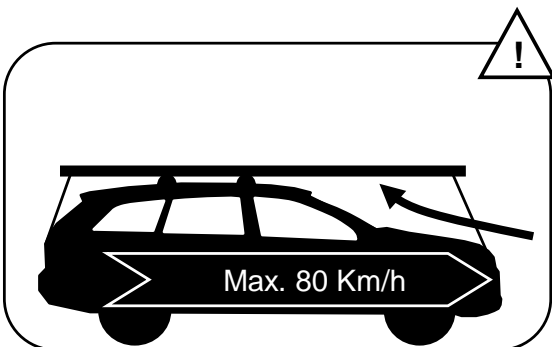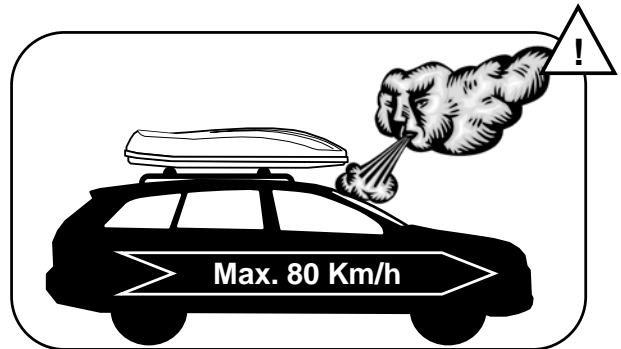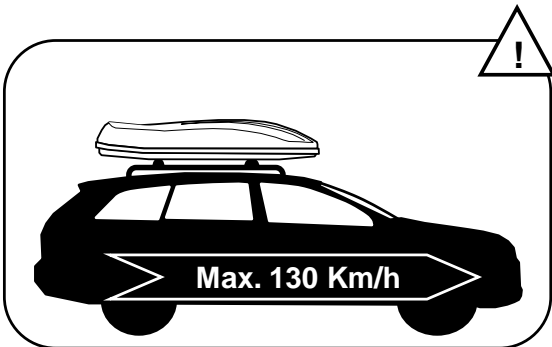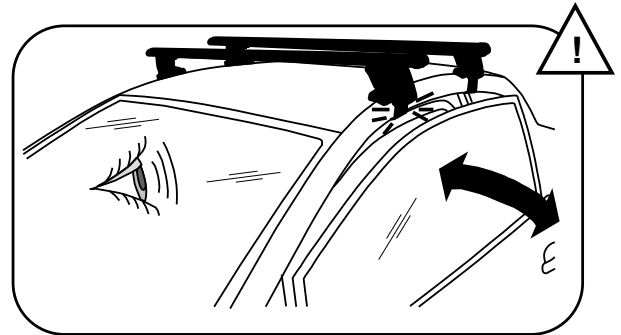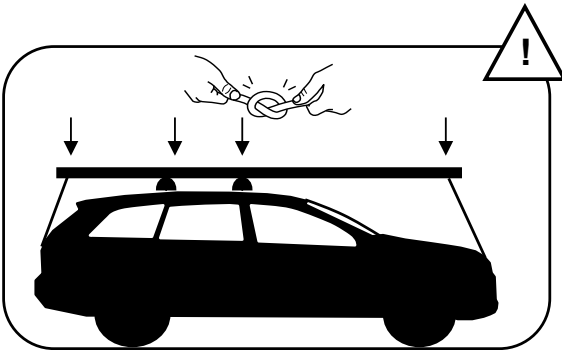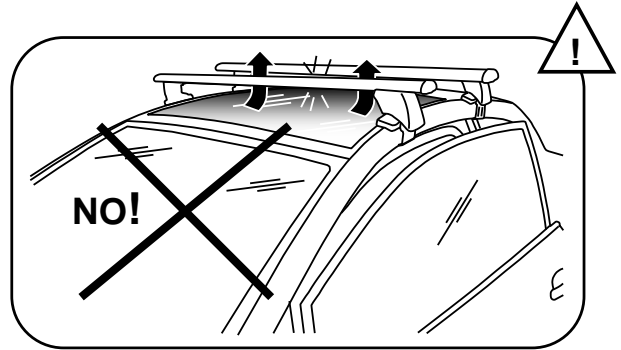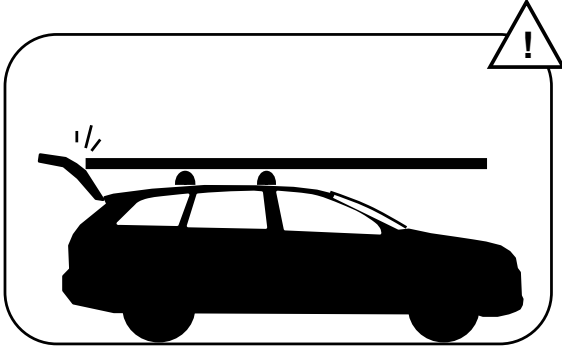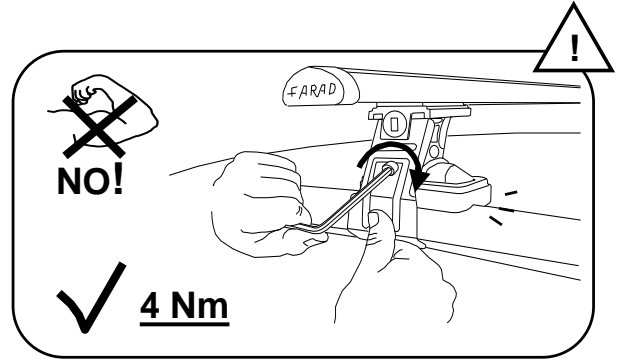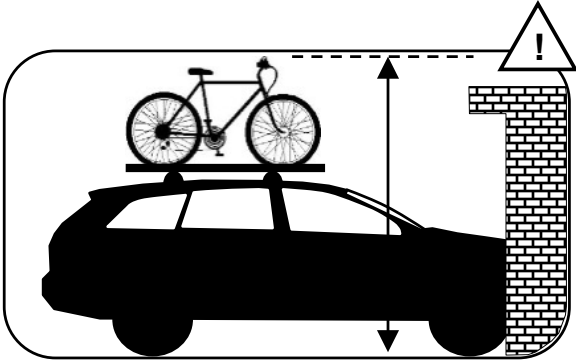

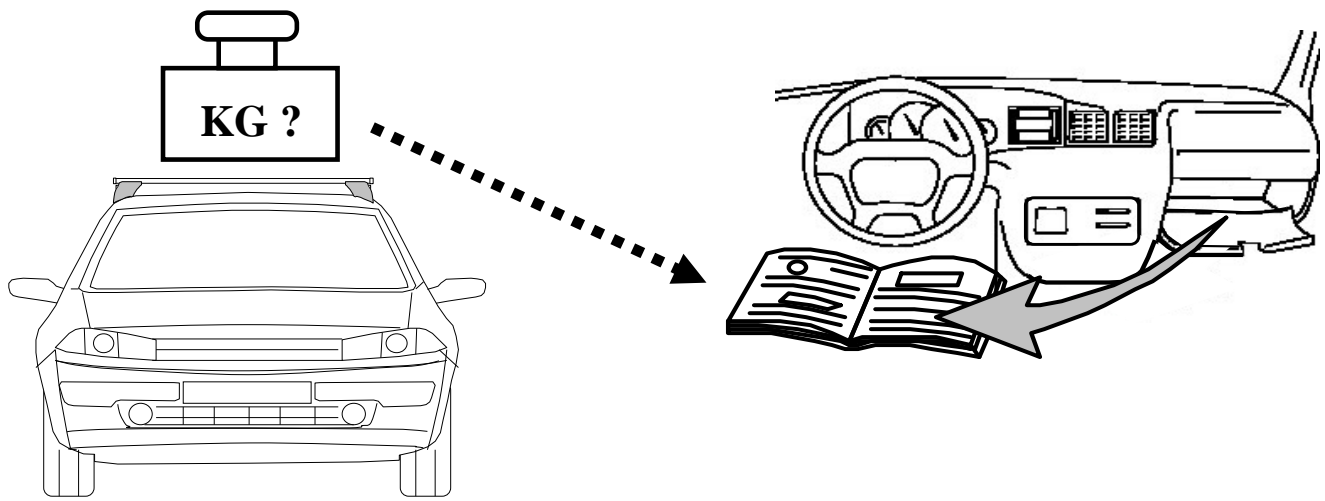

- I Controllare carico del tetto sul manuale dell'auto
- PL Sprawdź ładowność dachu w instrukcji
- GB Check roof load capacity in car instruction
- NL check de handleiding belasting van het dak van de auto
- F vérifier le chargement manuel du toit de la voiture
- D überprüfen Sie die manuelle Beladung der Autodach
- E comprobar la carga manual del techo del coche
- SWE kontrollera manuellt inläggning på taket av bilen

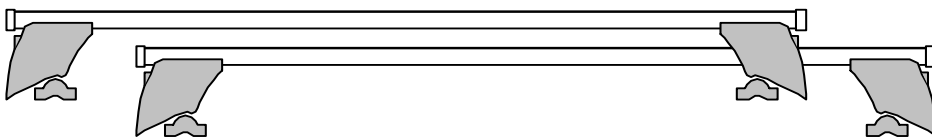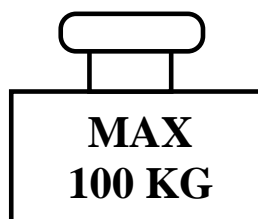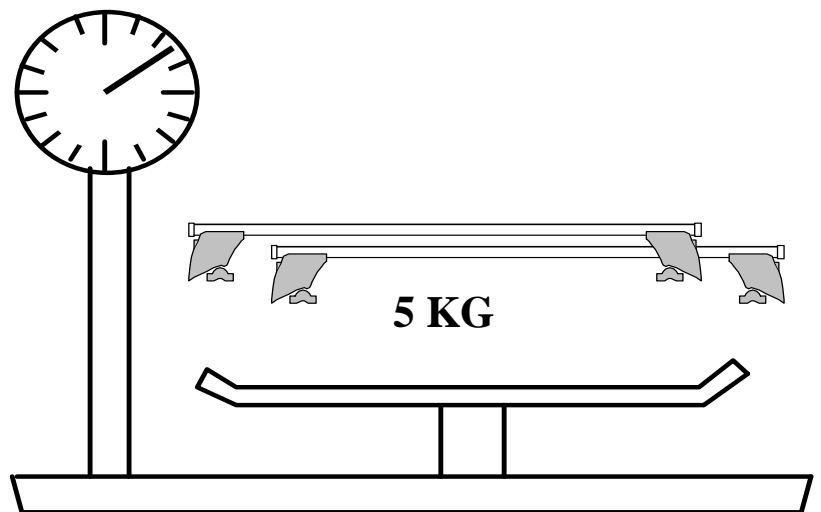

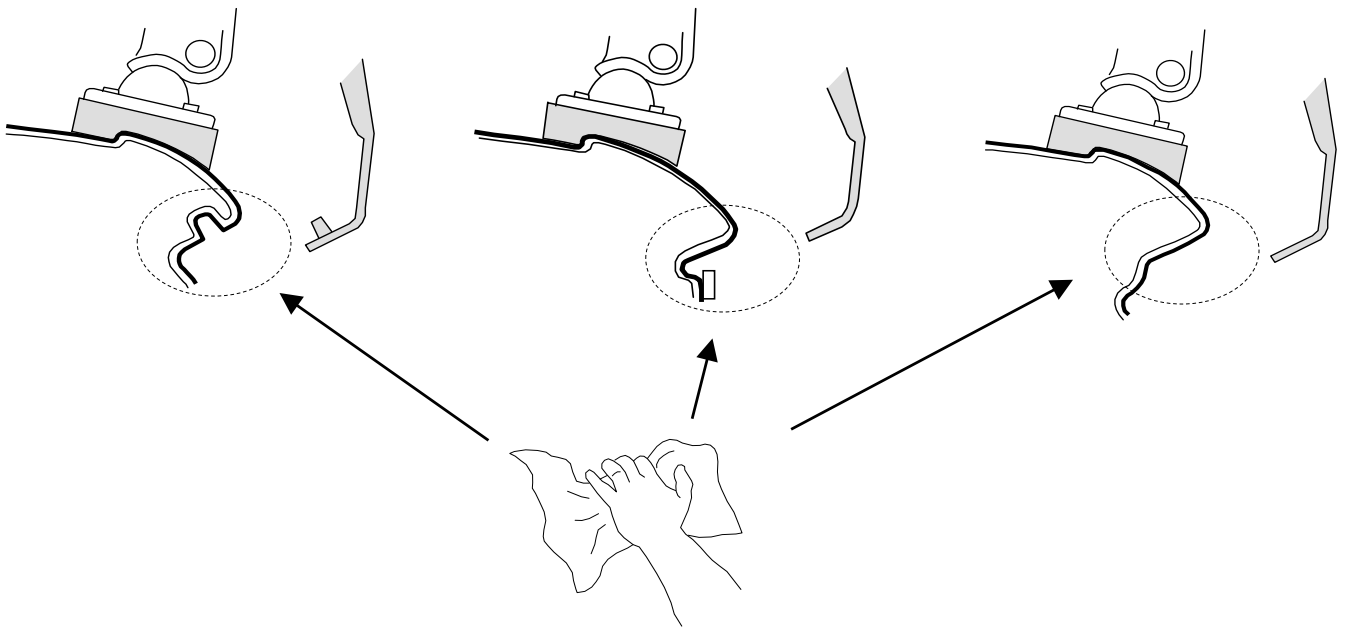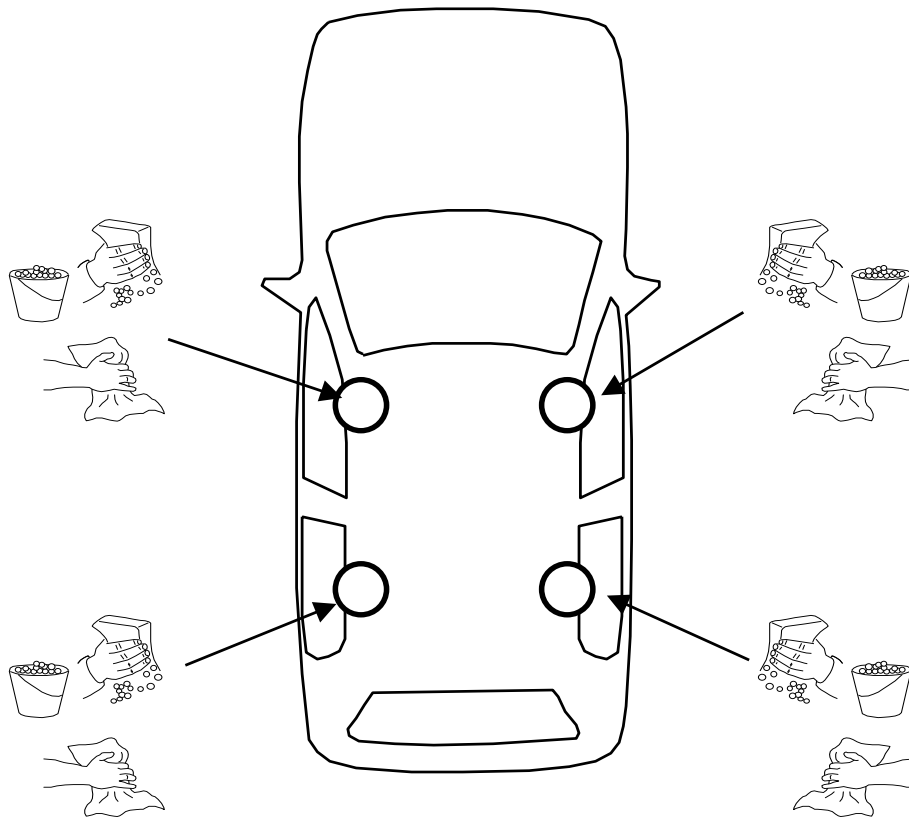

I **Montaggio Barra Anteriore**

F **Fixation Barre Avant**

PL **Montaż Bagażnika Bazowego Tylnego**




GB **Fitting Front Roof Bar**




D **Montage Vorderes Dachträgers**


NL **Montage Voorste Dakdrager**

SWE **Montering Av Främre Lasthållaren**

E **Fijación Barra Frontal**

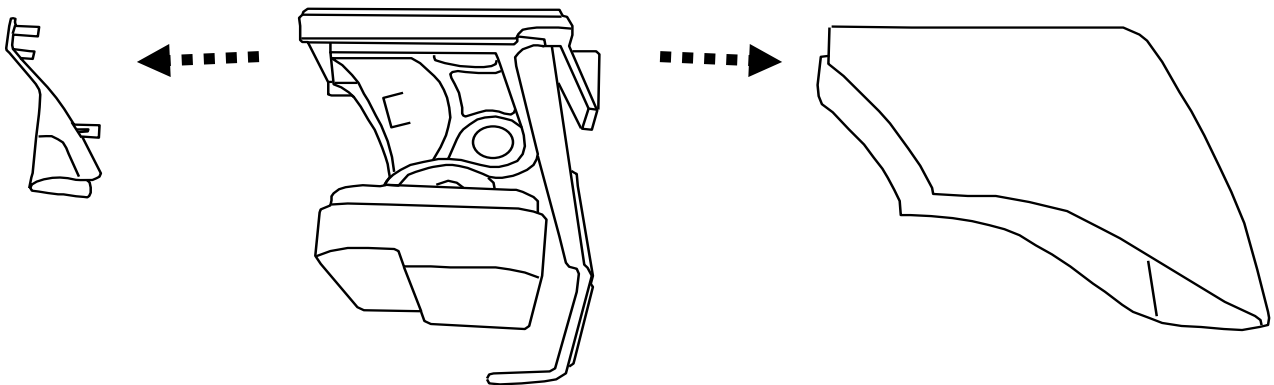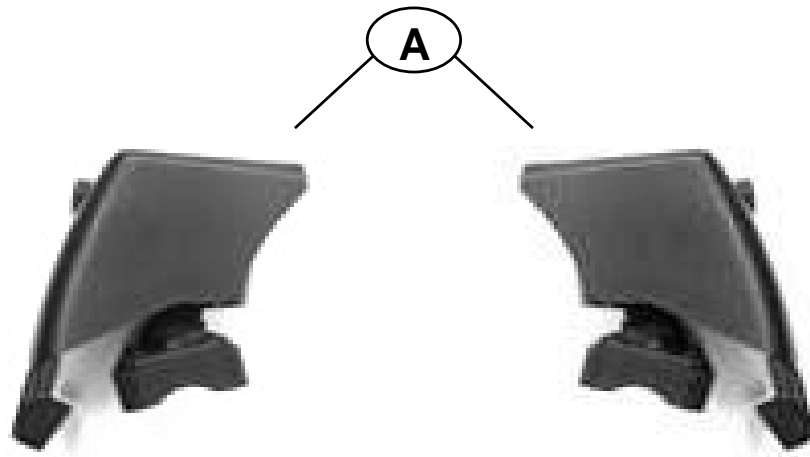
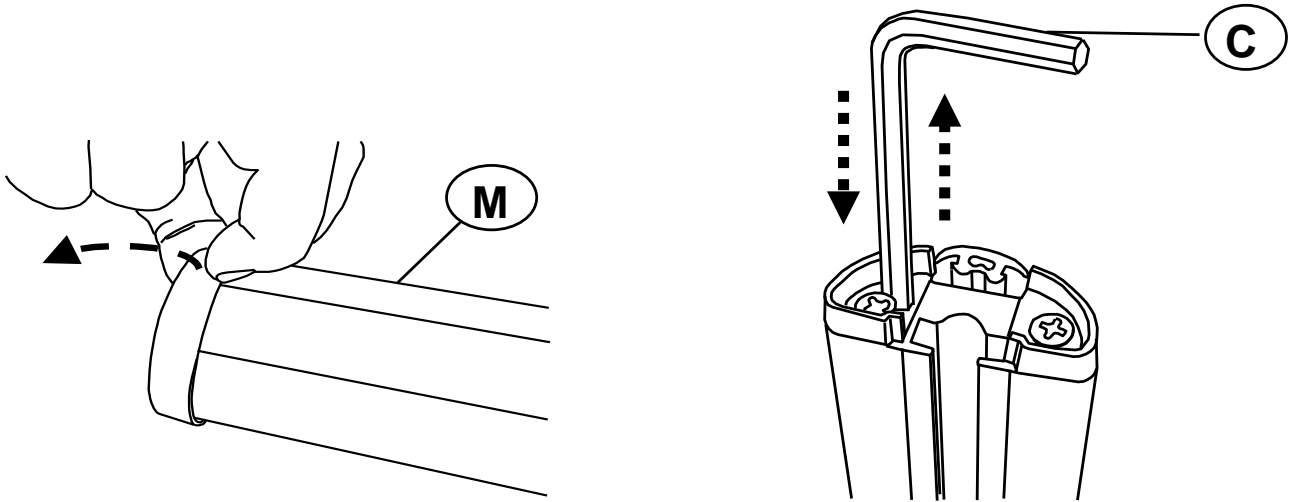


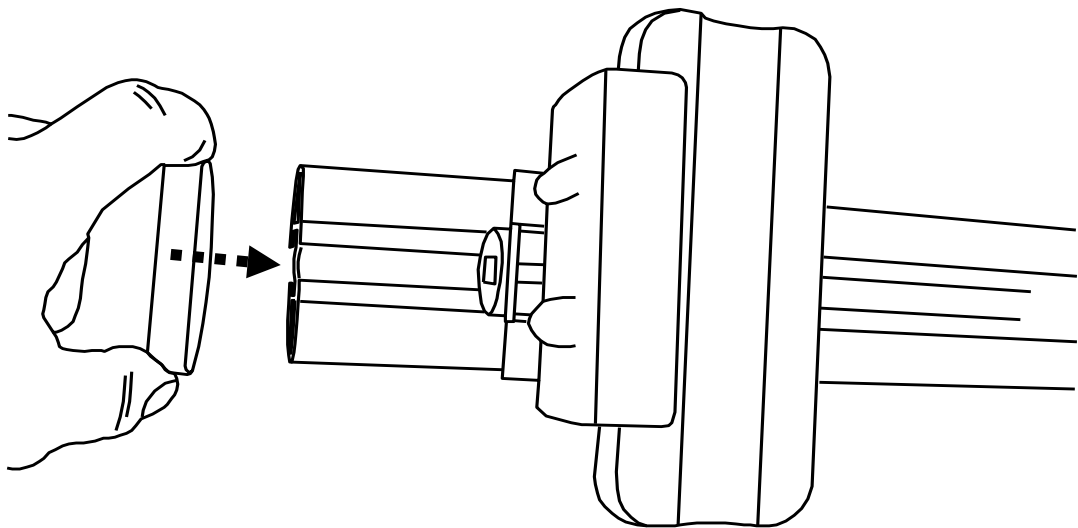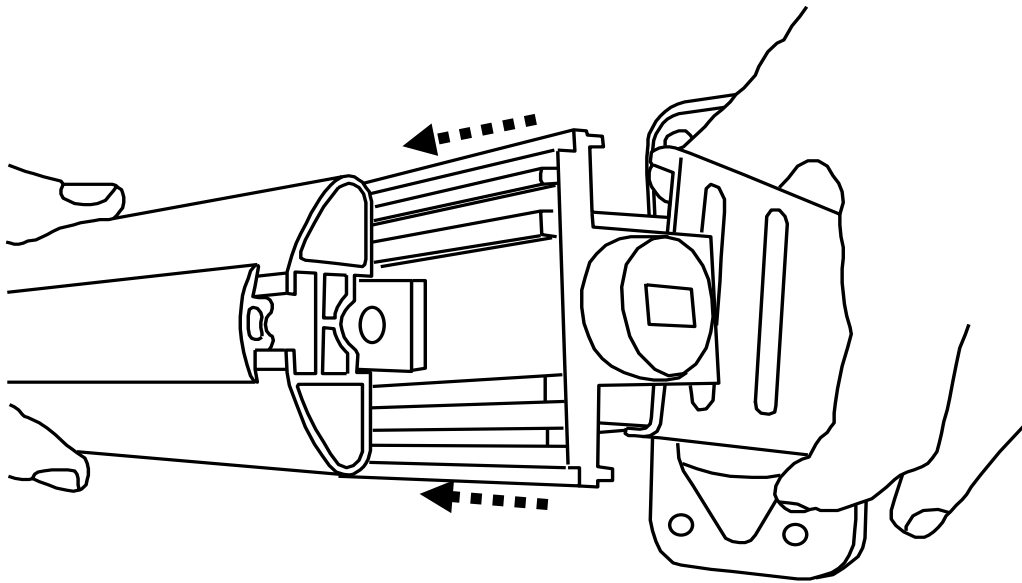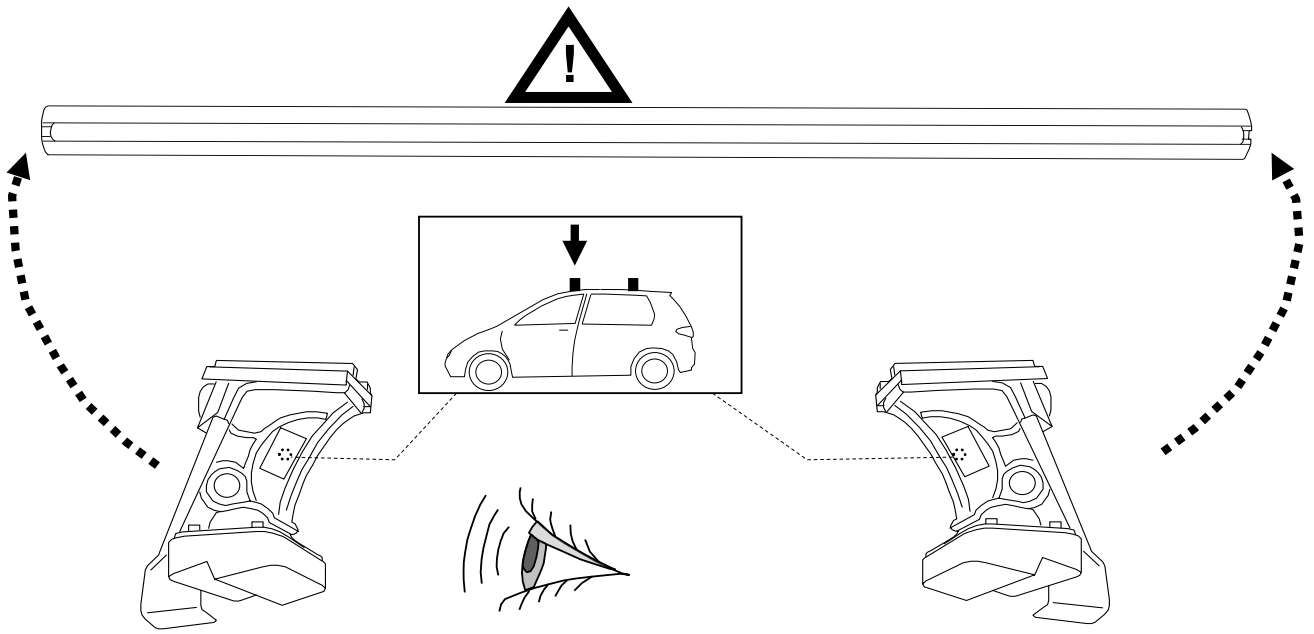
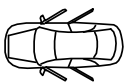
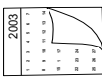



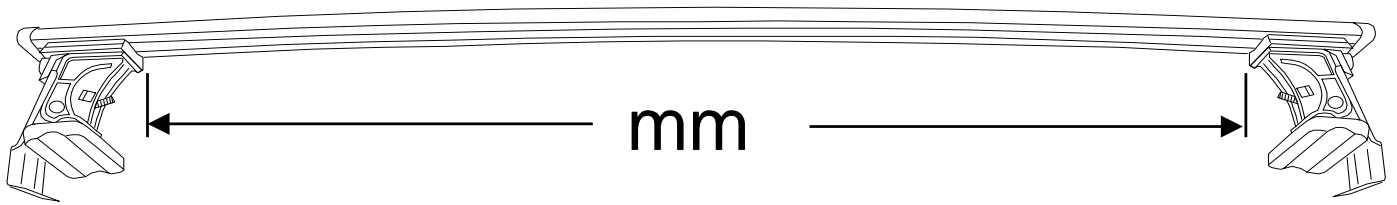



esempio - example

R= 8

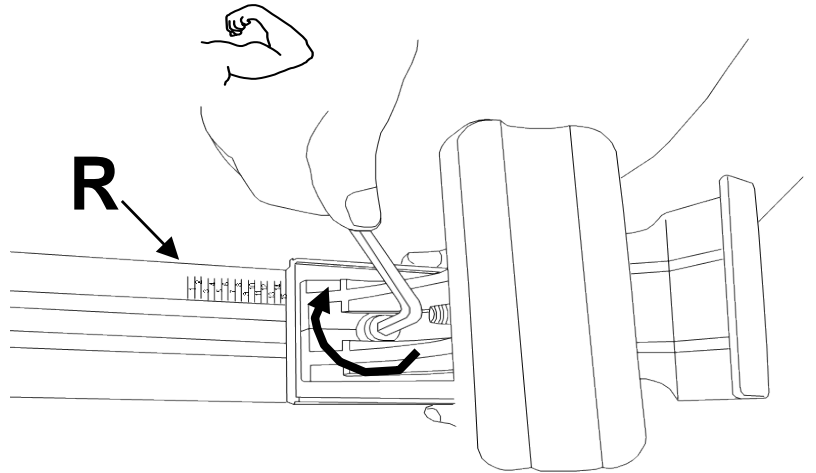
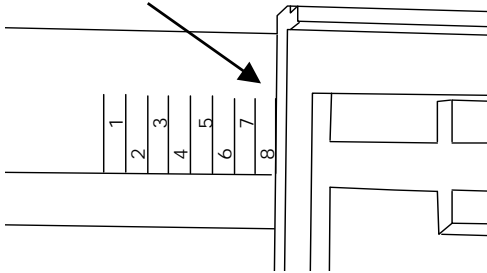



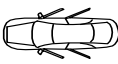
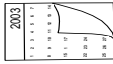
				R	mm
BMW	5 TOURING	5	2004 - 2010	R= 29	1010
BMW	5 BERLINA	5	2003 - 2010	R= 29	1010
TOYOTA	COROLLA BERLINA	5	1997-2002	R= 41	965
VW	GOLF PLUS	5	2005>	R= 33	1025
SEAT	ALHAMNBRA	5	2011 >	R= 48	1205
FORD	EDGE	5	2016>	R= 34	1135

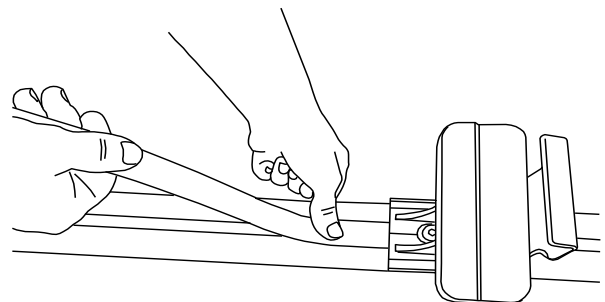
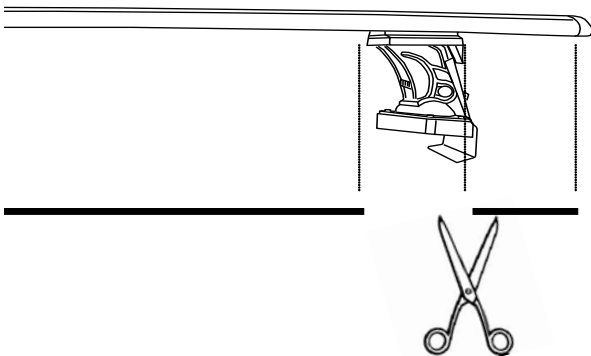


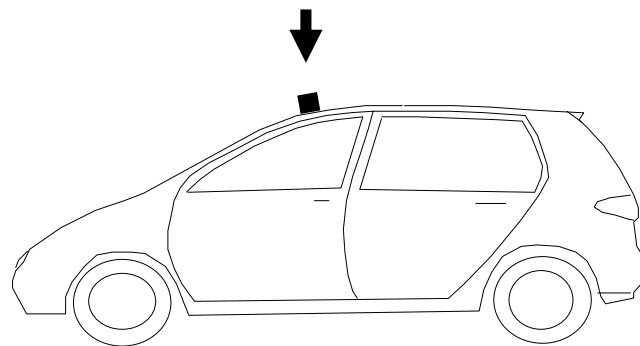


D

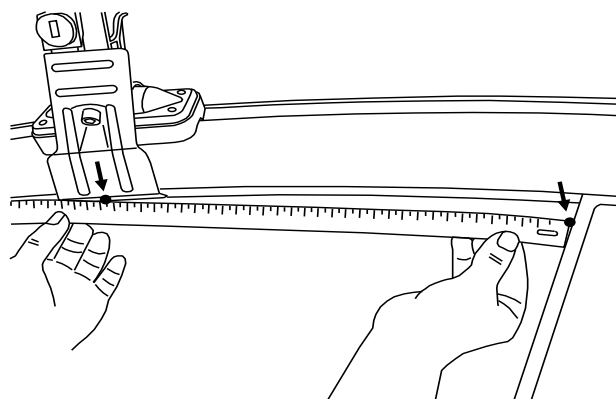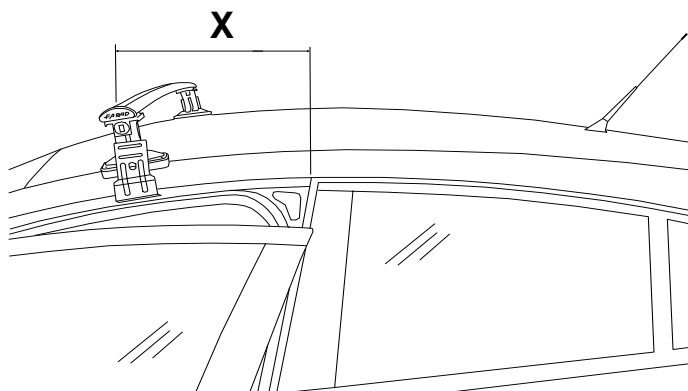



				X
BMW	5 TOURING	5	2004 - 2010	X= 230
BMW	5 BERLINA	5	2003 - 2010	X= 230
TOYOTA	COROLLA BERLINA	5	1997-2002	X= 180
VW	GOLF PLUS	5	2005>	X= 360
SEAT	ALHAMBRA	5	2011 >	X= 150
FORD	EDGE	5	2016>	X= 300

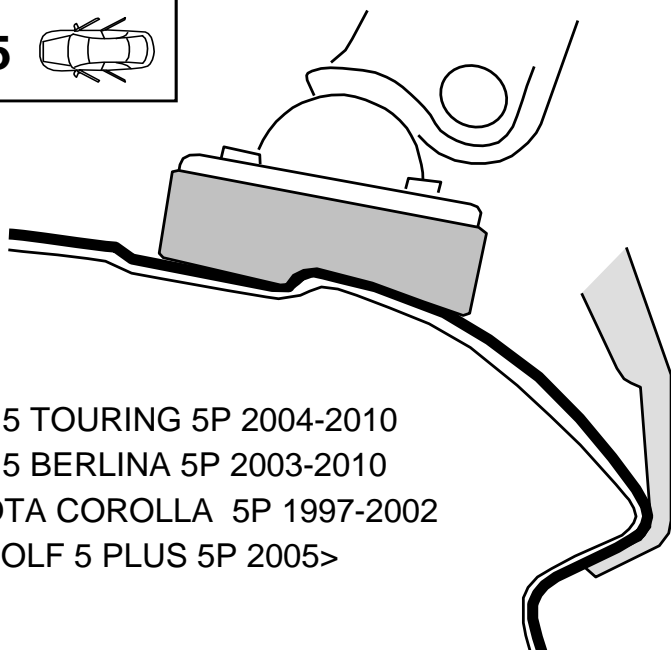


BMW 5 TOURING 5P 2004-2010
 BMW 5 BERLINA 5P 2003-2010
 TOYOTA COROLLA 5P 1997-2002
 VW GOLF 5 PLUS 5P 2005>


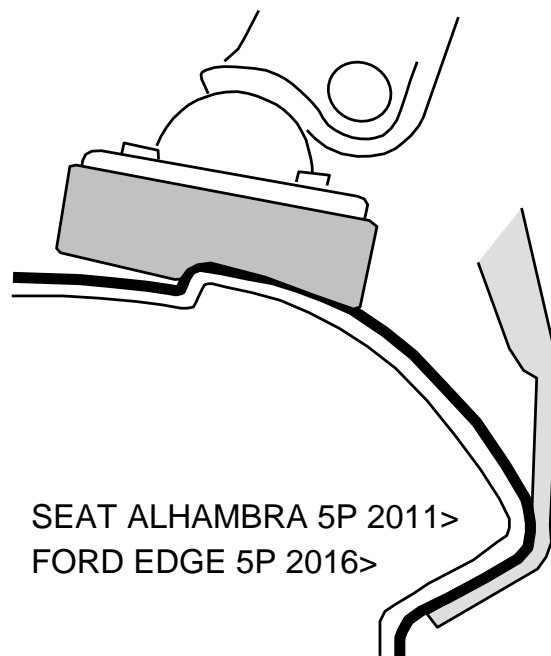


SEAT ALHAMBRA 5P 2011>
 FORD EDGE 5P 2016>

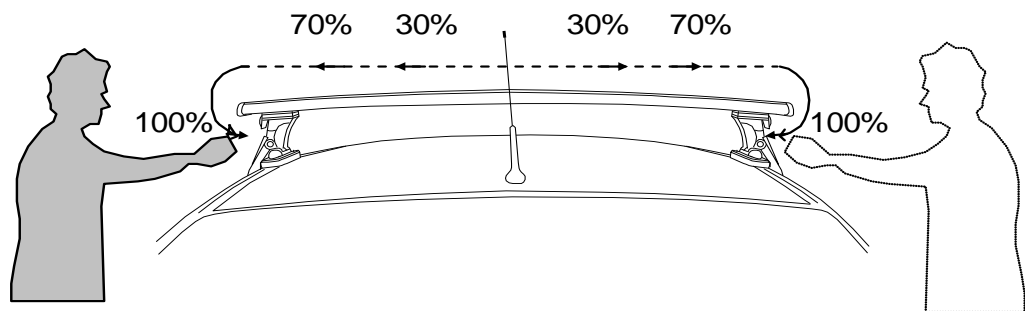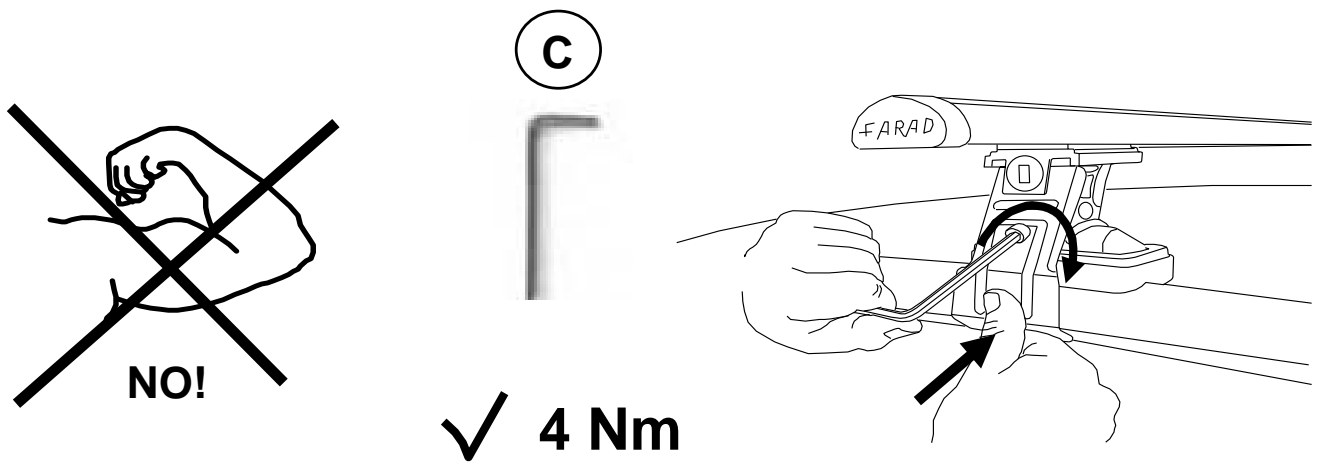



- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

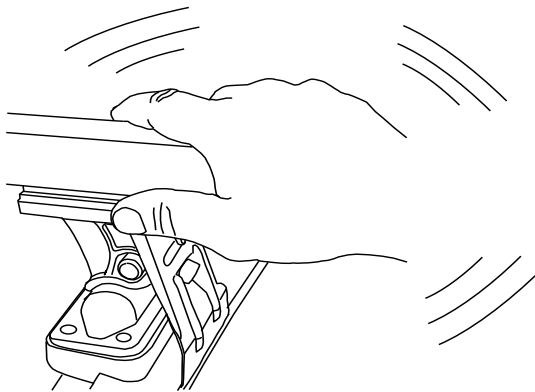

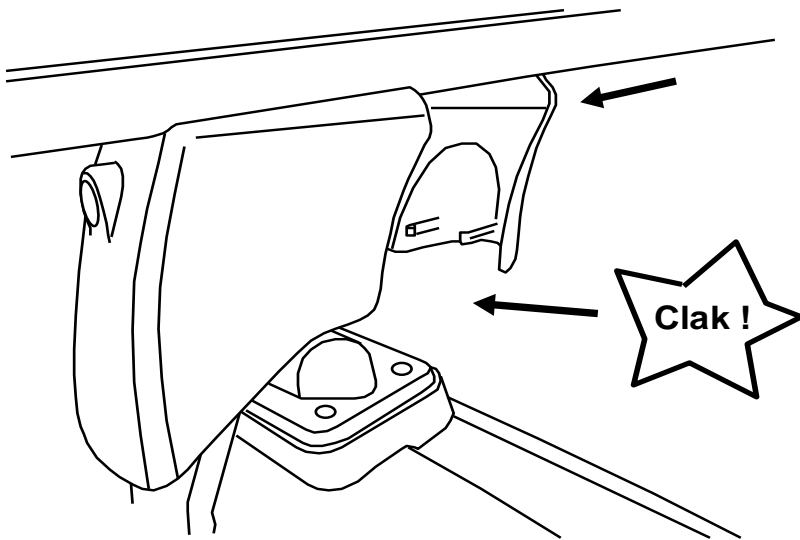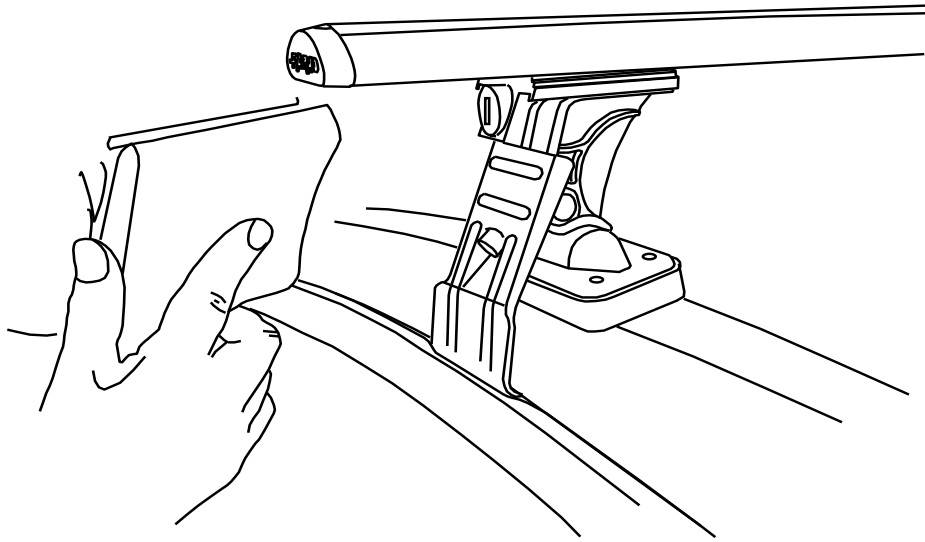

B

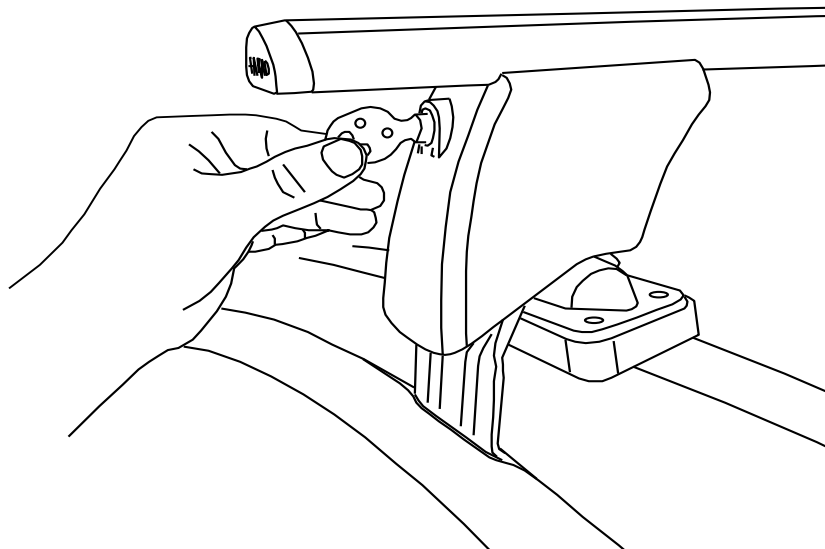


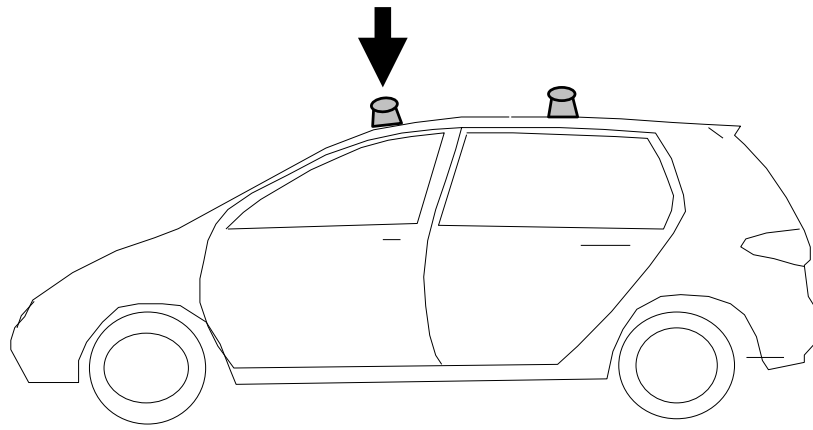

BMW 5 TOURING 5P 2004-2010 - BMW 5 BERLINA 5P 2003-2010
TOYOTA COROLLA 5P 1997-2002 - VW GOLF 5 PLUS 5P 2005>



SEAT ALHAMBRA 5P 2011>
FORD EDGE 5P 2016>

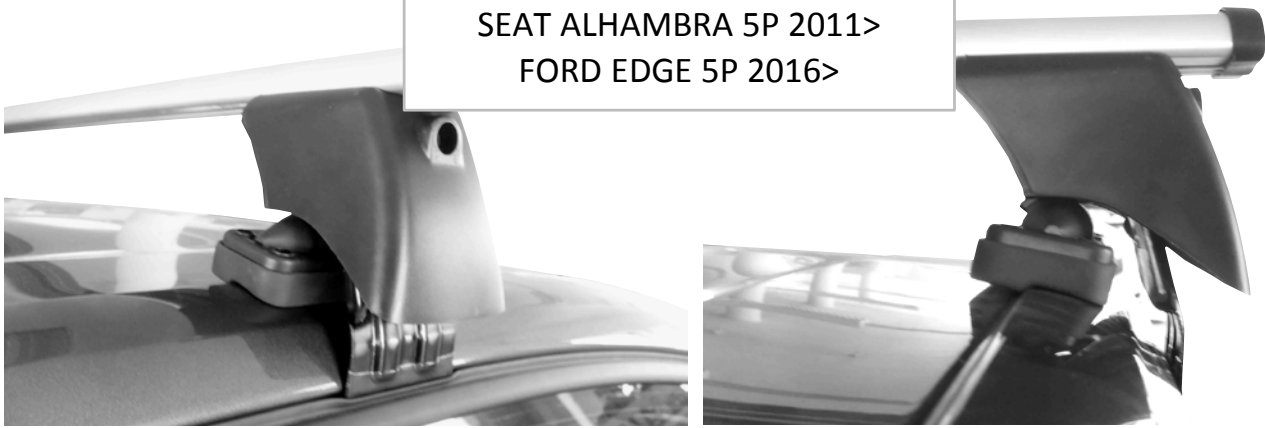

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I **Montaggio barra posteriore**

F **Fixation Barre Arriere**

PL **Montaż Bagażnika Bazowego Przedniego**




GB **Fitting Rear Roof Bar**




SWE **Montering Främre Lasthållaren**



E **Fijación Barra Trasera**

NL **Montage Achterste Dakdrager**

D **Montage Heckdachträgers**

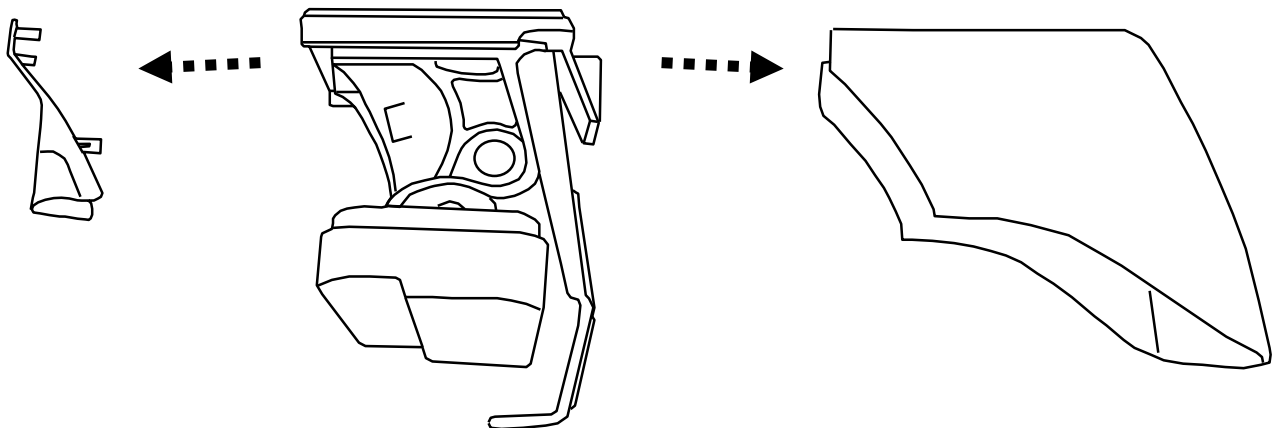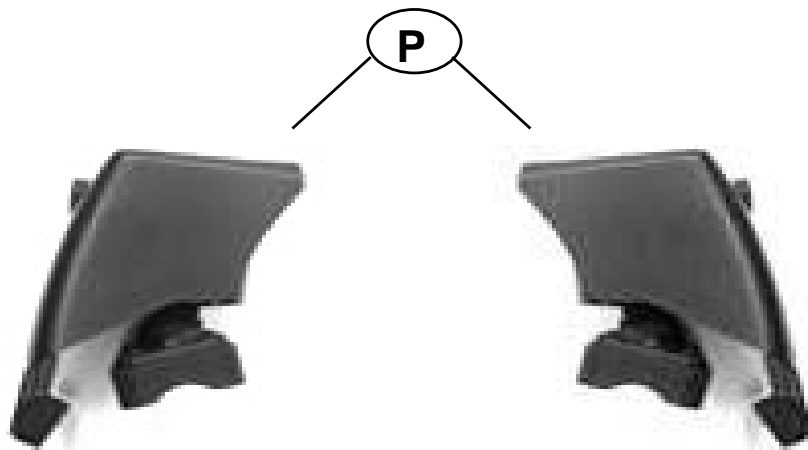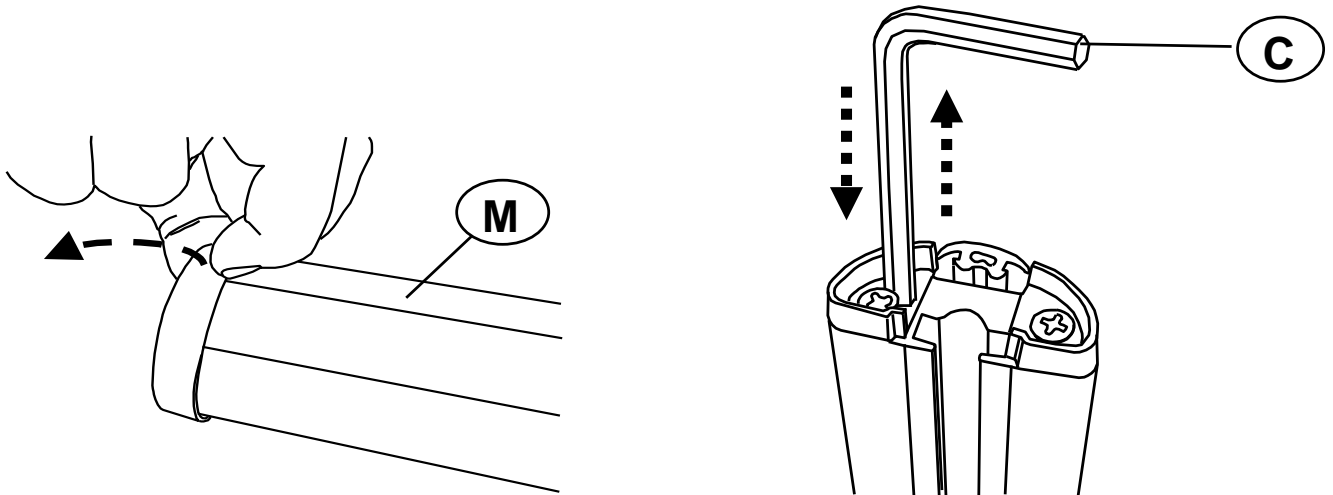


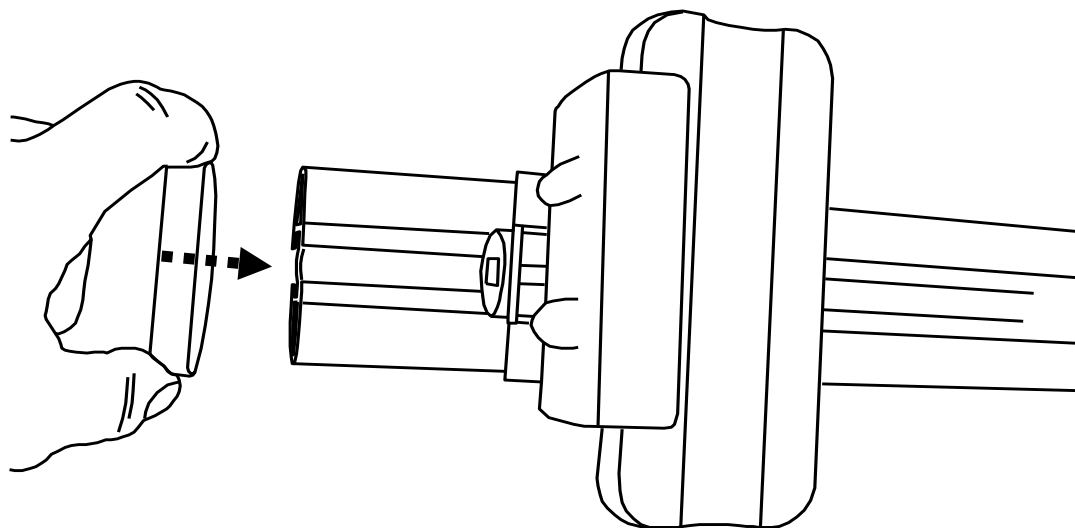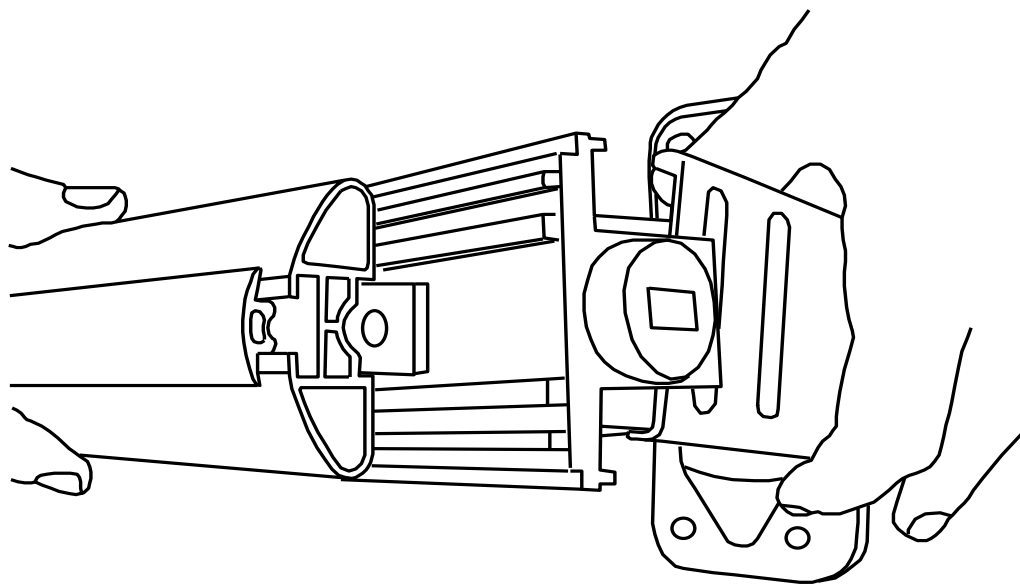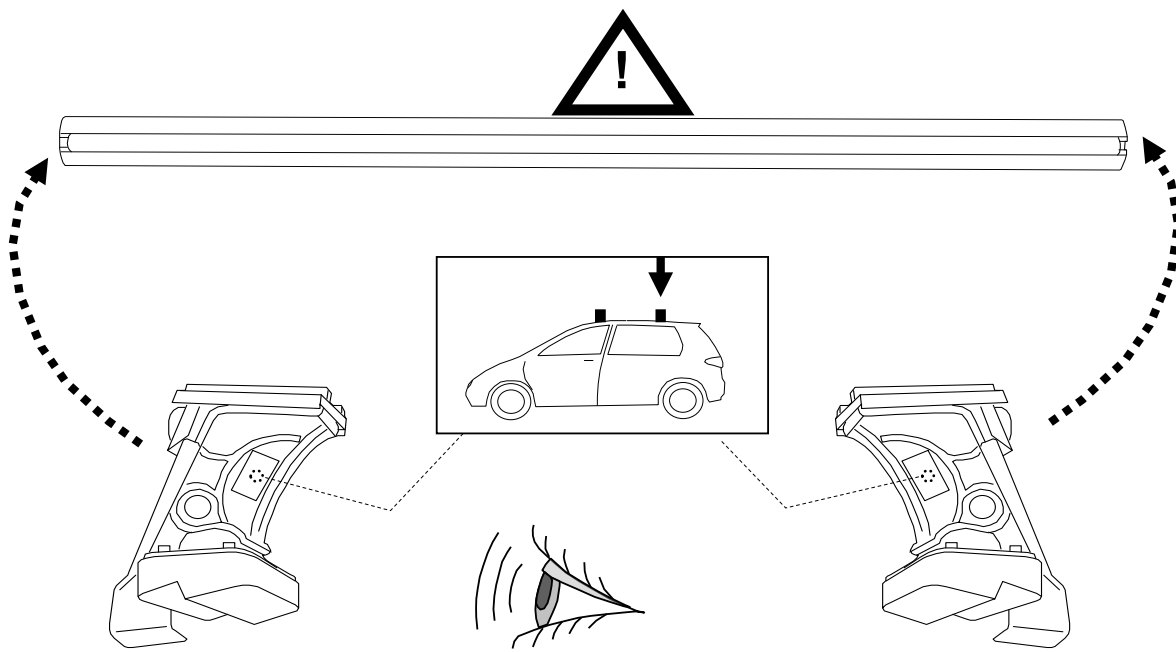

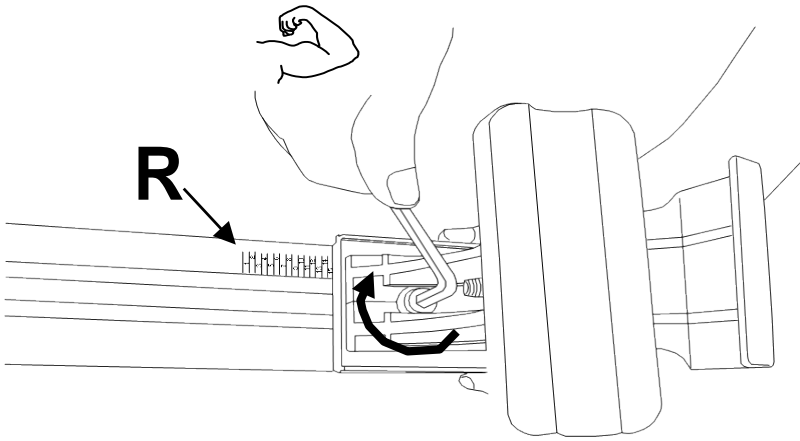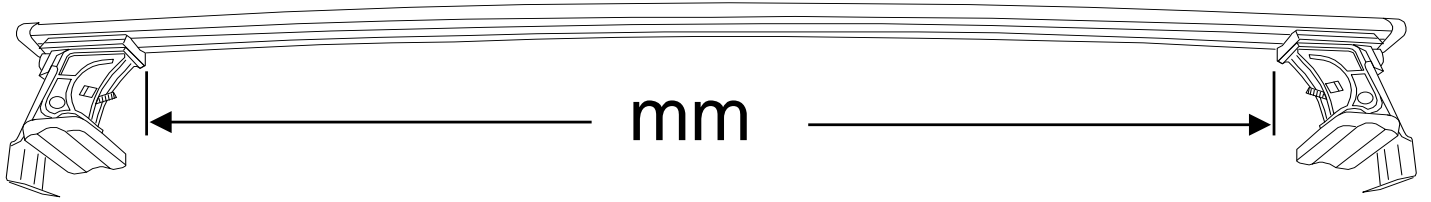


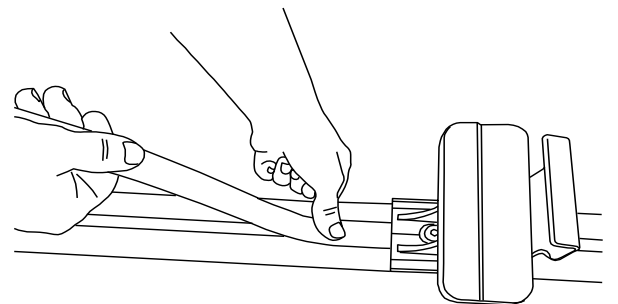
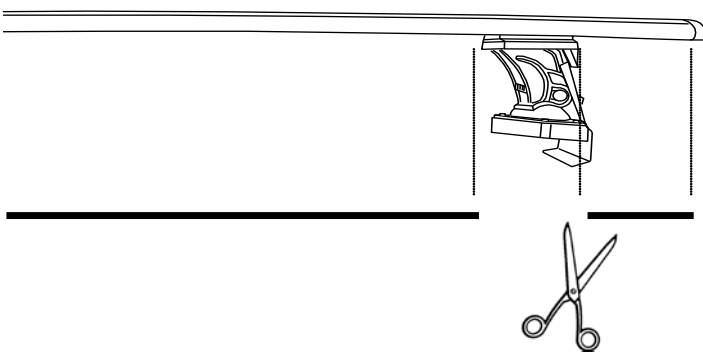



esempio - example

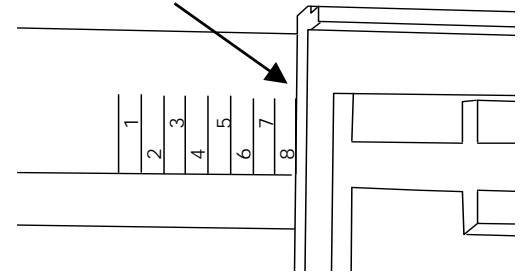R= 8






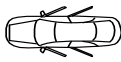

			R	mm	
BMW	5 TOURING	5	2004 - 2010	R= 24	980
BMW	5 BERLINA	5	2003 - 2010	R= 27	1000
TOYOTA	COROLLA BERLINA	5	1997-2002	R= 39	955
VW	GOLF PLUS	5	2005>	R= 17	945
SEAT	ALHAMBRA	5	2011 >	R= 42	1175
FORD	EDGE	5	2016>	R= 26	1095





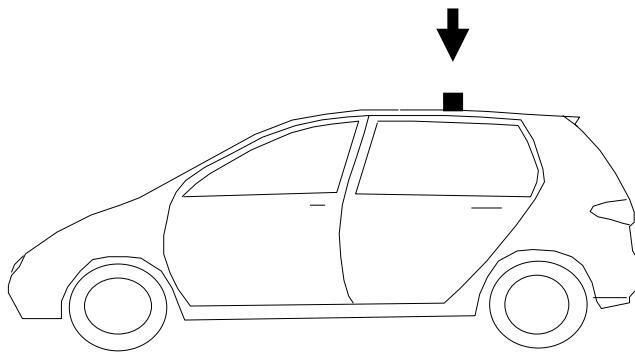


D

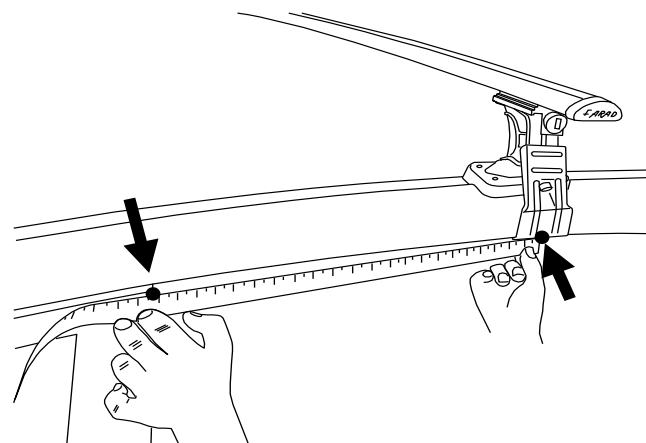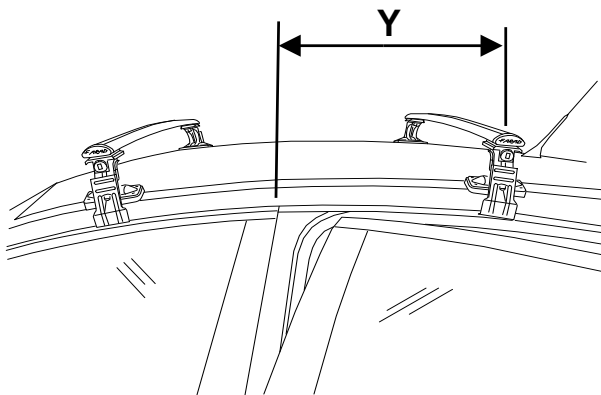

				Y
BMW	5 TOURING	5	2004 - 2010	Y= 460
BMW	5 BERLINA	5	2003 - 2010	Y= 460
TOYOTA	COROLLA BERLINA	5	1997-2002	Y= 420
VW	GOLF PLUS	5	2005>	Y= 360
SEAT	ALHAMBRA	5	2011>	Y= 600
FORD	EDGE	5	2016>	Y= 480

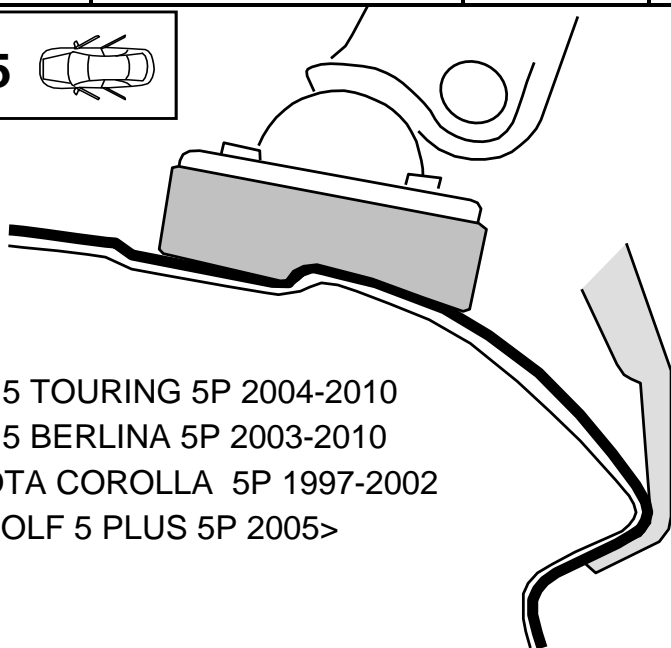



BMW 5 TOURING 5P 2004-2010
 BMW 5 BERLINA 5P 2003-2010
 TOYOTA COROLLA 5P 1997-2002
 VW GOLF 5 PLUS 5P 2005>

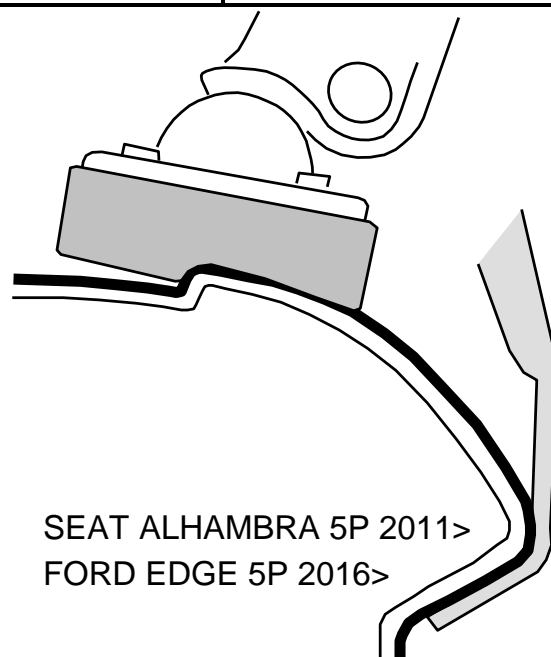


SEAT ALHAMBRA 5P 2011>
 FORD EDGE 5P 2016>




C

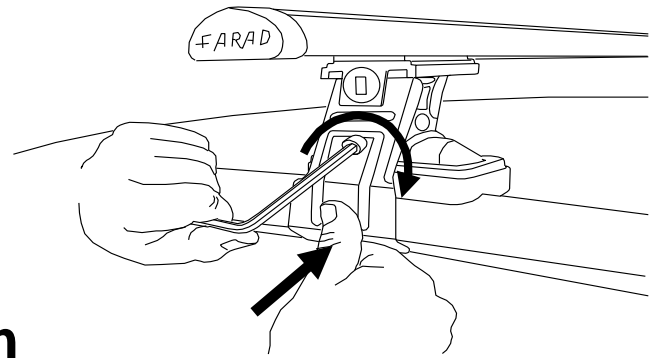



✓ 4 Nm

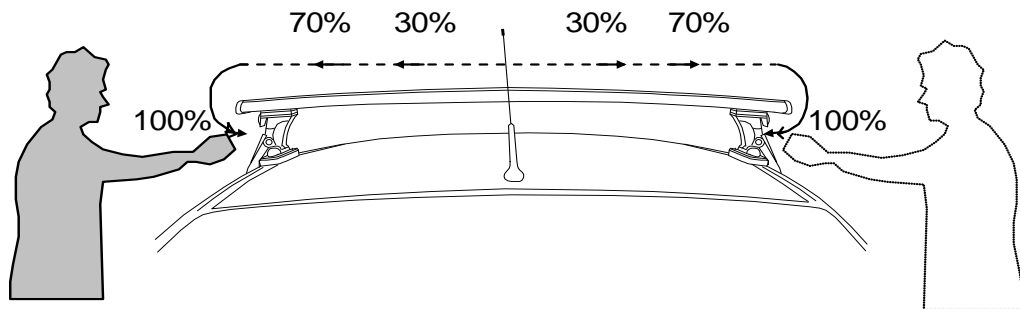



- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

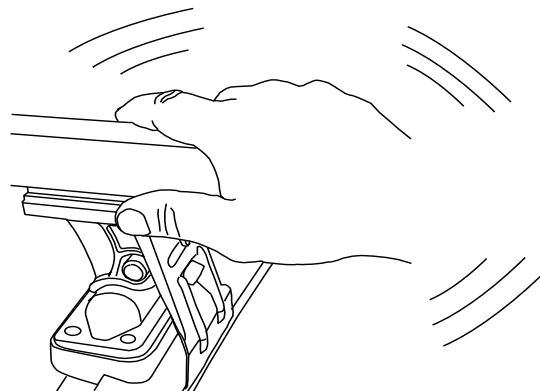

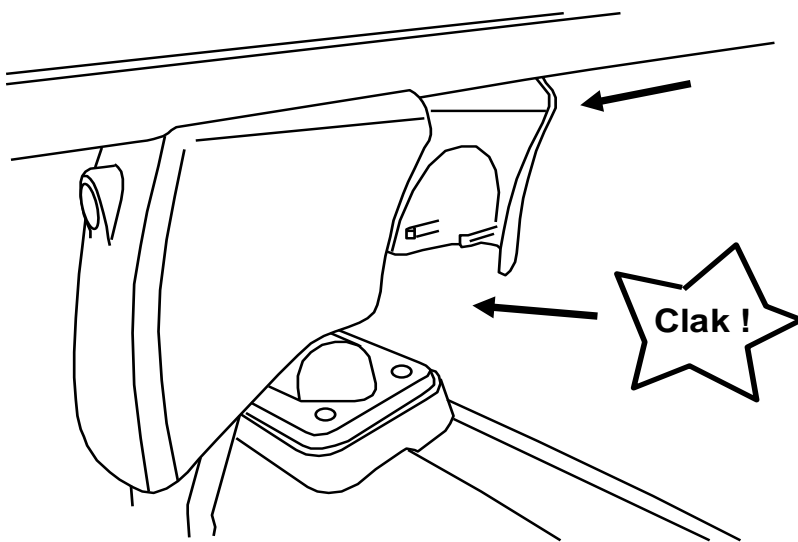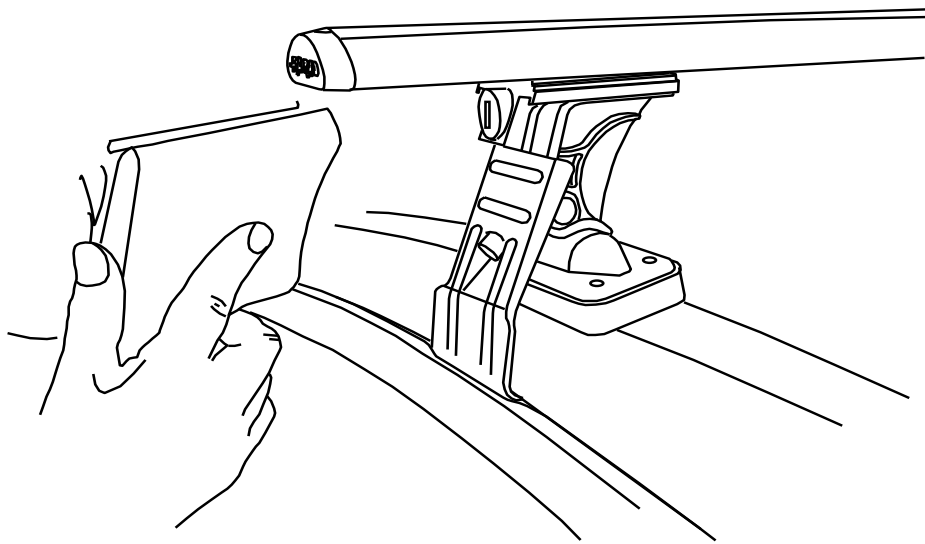

B

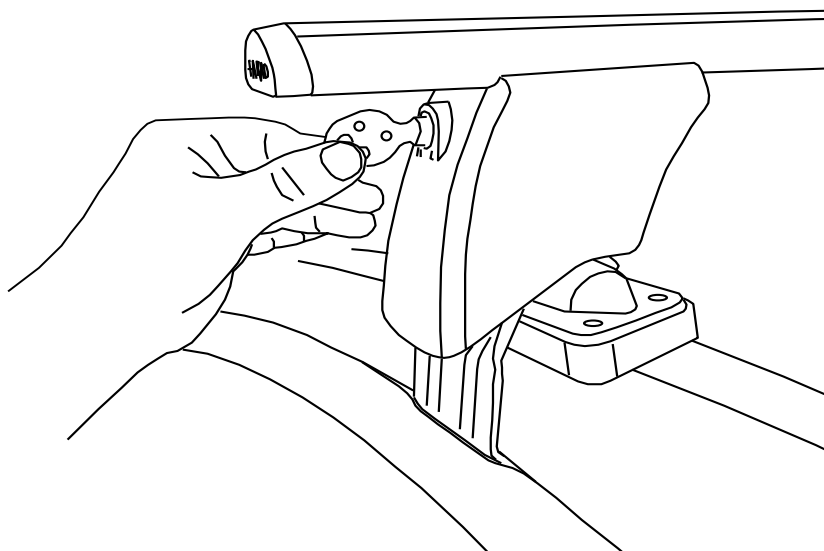

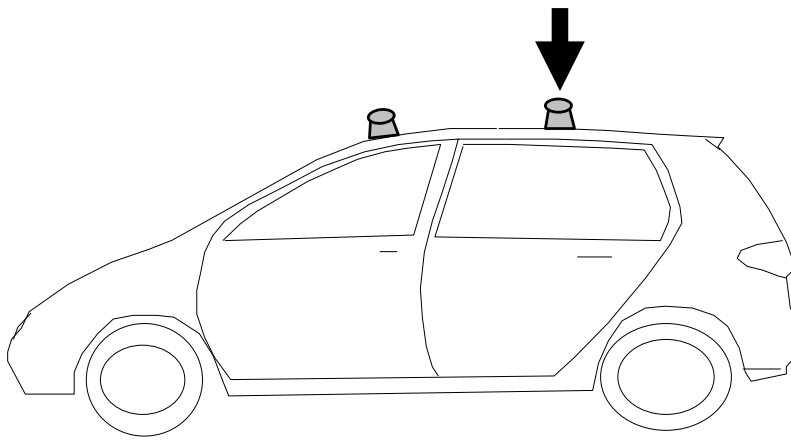

BMW 5 TOURING 5P 2004-2010 - BMW 5 BERLINA 5P 2003-2010
TOYOTA COROLLA 5P 1997-2002 - VW GOLF 5 PLUS 5P 2005>



SEAT ALHAMBRA 5P 2011>
FORD EDGE 5P 2016>



- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

RICAMBI - SPARE PARTS



PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15



SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5



SOTTO PIEDE SP01
90341 / 3



SOTTO PIEDE SP08
90341 / 14



SOTTO PIEDE SP12
90341 / 1



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP 10
90341 / 12



SOTTO PIEDE SP04
90341 / 13



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20



NOTTOLINO + n° comb
90341 / 6



SOTTO TAPPO
90241 / 9



TAPPO BARRA
90241 / 6



INVOLUCRO POST.
90341 / 9



INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + n° comb
90341 / 7



PALETTA
90341 / 4



BARRA ALLUMINIO
90241 / 7



GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15

FARAD

tel. 011 9710900 - fax. 011 9710947
www.farad.it